





With PACO's innovative 2 in 1 system, changing from SRAM to Shimano, or from MTB to road frames and vice versa is a simple matter of adding spacers, a bushing and/or a spring washer to your existing PACO bottom bracket.

Simply take the bottom bracket out of the bicycle's frame, unscrew both ends, insert or take out the appropriate parts, re-assemble and re-install into the frame and you're done. No fuss, no mess, no complications. This brochure will illustrate how the entire system works.

And as an added bonus, there's no need to spend money to buy a new bottom bracket while helping conserve resources by re-using a perfectly functioning bottom bracket.

And as with all PACO products, we only use the finest materials that balances function, performance, durability, weight and price to give you the best value for money.

PACO bottom brackets are available in a variety of colors.

For more information on available colors, visit our website. For customized colors (may be subject to MOQ), email us.




PACO BIKE CO., LTD.

80, Yuanlu Rd., Yuanlin, Changhua County 510, Taiwan

TEL 886-4-838-4342 FAX 886-4-838-0736

paco@paco-bike.com

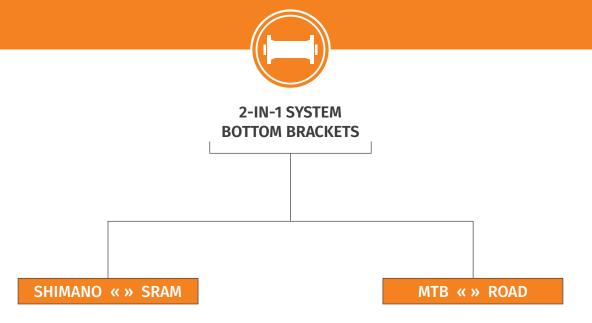

To learn more about the 2 in 1 system for bottom brackets, or the latest news and products, visit our web and social media site at:





MWW.PACO-BIKE.COM | FACEBOOK.COM/PACOBIKE2013

